

SPECIFICATION

Arc 10 plus

Distance Measurement with Reflector	Range *1	5000m
	Accuracy	±(2+2ppmxD)mm
	Measure Interval	Fine: 0.3s, Tracking: 0.1s
Distance Measurement without Reflector	Range *2	1000/1500/2000m Optional
	Accuracy	±(3+2ppmxD)mm
	Measure Interval	0.3-3s
Angle Measurement	Accuracy	2"
	Measure Method (HZ/V)	Absolute Continuous, Diametrical
	Diameter of Encoder Disk	79mm
	Display Resolution	0.1"
	Compensation	Liquid, Dual Axis Compensation
	Compensator Setting Accuracy	1"
	Compensator Range	±4'
Telescope	Image	Erect
	Tube Length	154mm
	Effective Aperture	45mm (EDM:50mm)
	Magnification	30x
	Laser Dot Size	A 20 m: 6mm x 9mm
		A 50 m: 8mm x 20mm
		A 100 m: 15mm x 26mm
	Resolving Power	3"
	Field of View	1°30"
	Focusing Range	1.2m
Vial	Reticle	Illuminated, 4 Brightness Level
	Plate Vial	30"/2mm
	Circular Vial	8'/2mm
Laser Plummet (Default)	Type	Laser Point, 4 Brightness Level
	Accuracy	±1.5mm at 1.5M Instrument Height
	Wavelength	630-670nm
	Laser Class	Class 2 /IEC60825-1
	Laser Power	<0.4mW
Optical Plummet (Optional)	Image	Erect
	Magnification	3x
	Focusing Range	0.5m
	Field of View	5"
	Accuracy	±1.5mm at 1.5M Instrument Height
System Config	Operating System	Android 12.0
	Processor	MT6753
	Internal Memory	RAM: 3GB; ROM: 32GB
Communication	Interfaces	- Serial Port (6-Pin)
		- Micro SIM
		- USB Type C (OTG)
		- TF Card
	Network	2G 900/1800
		3G 2100/900 CDMA BCO TDSCDMA A/F
		4G LTE band1/3/7/38/39/40/41
Display	Bluetooth	Bluetooth 4.0
	WLAN	Dual-Band Single Stream 802.11 a/b/g/n RF for Data Link
	Microphone / Speaker	Available
Display	Type	TFT LCD Screen, Graphics, 720*1280
Battery	Type	Lithium-Ion, 7.4V
	Operating Time	8 Hours
Dimension	Size	200mm*170mm*350mm
	Weight	5.7kgs
Environmental	Temperature Range (Operation)	-20°C--+50°C
	Protection	IP65

*1: Good conditions (good visibility approx.40km, overcast, twilight)

*2: White objects with high reflectivity (KGC 90%)



TOTAL STATION

Arc 10 Plus

Endless Locking System



Dealer Info



SANDING OPTIC-ELECTRICS INSTRUMENT CO.,LTD
Add: 7/F, No.39 Si Cheng Road, Tian He IBD Guangzhou 510663,China
Tel: +86-20-23380888 Fax: +86-20-23380800
E-mail:export@sandinginstrument.com http://www.sandingnstrument.com



MEASURE FARTHER AND FASTER

Uninterrupted Workflow!

ENDLESS LOCKING SYSTEM

New endless locking system enables users to aim the targets without locking the screw, which can boost efficiency by up to **30%** and save more time when implementing a fieldwork.



DISTANCE MEASUREMENT


1000m reflectorless measuring range covers a most common scale in your field job. With a single prism, you can reach up to 5km quickly with 2mm+2ppm accuracy.



Touch Screen & Keypad

5.0" High-Resolution Color Touch Screen: For intuitive control and sharp, easy-to-read displays.

Dedicated Numeric Keypad: For faster, more reliable data entry than touchscreen-only alternatives.

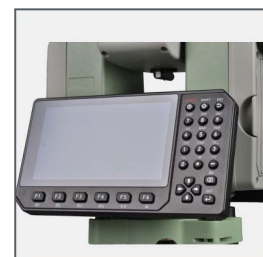

Dual Laser EDM

- 2000m Non-prism
- Stronger return signal due to its dual laser technology



Coaxial Laser Pointer

- Provided the precise guidance for target aiming



USB OTG, TF Card & Bluetooth

- Flexible transfer of data via PC or PDA

WLAN & 4G Module

- Quick access to Internet



Intelligent O.S

- Android 12.0
- User friendliness
- Free SDK package for developer



Powerful Processor

- 8-Core processor, MT6753, boosts speed and responsiveness




Intuitive Software

- Graphic guidance, intuitive workflow
- Extra application software for mapping



WORK EFFICIENTLY

With Arc10 plus On-board Software

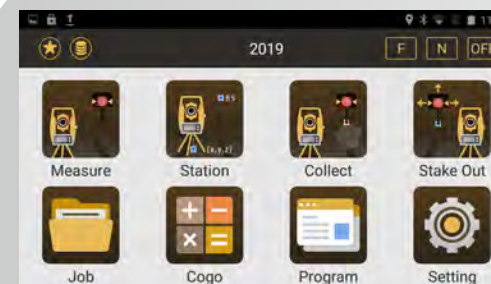



Iconic User Interface

Arc10 plus helps you finish the job efficiently by graphical and iconic guidance. Benefit from the quick access of star-key and toolbar, you can set the PPM, reticle illumination, laser pointer and plummet or check the target, data or electronic sensor quickly in your job.

Powerful Applications on Arc10 plus

Easy-to-use due to its high resolution color display and powerful applications. Including but not limited to:

- Resection
- Point to Line
- Survey & Code
- Stake Out
- Reference Line
- Offset
- MLM
- REM
- Radiation
- Area & Volume
- COGO
- Roads

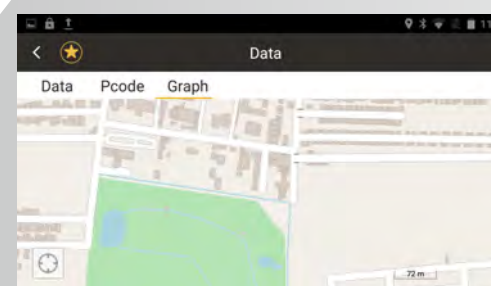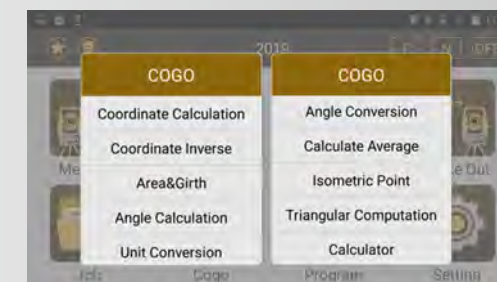

Data Visualization with Maps

Data visualized due to the graphic display on its downloaded map. Measurement with 2D maps enables the flexible data-checking and job-planning based on the actual position.

Additional Application ►►►

Map Star

Integrated the function of digital mapping with measurement, Map Star simplified your outdoor job and realized the efficient mapping on mobile devices instead of PC.

- Graphic guidance with intuitive workflow
- Iconic UI for station set up, mapping, job management
- Toolbar to quickly access the instrument status
- Full library of code, included description and code number
- Draw the objects (points, lines or surfaces) and shapes (square, circle or curve) freely as your wish
- Mark the points with words, pictures or recorded voice
- Generate the digital map automatically, which will largely save your time with superior convenience

